

1/4" SPACER INSIDE TRACK*
 *REQUIRED FOR CLASSIC AND HORSESHOE TROLLY

4 7/8 in

6 5/8 in

BYPASS BRACKET

CLASSIC FLAT-TRACK TROLLY

LAG BOLTS INTO WALL OR LEDGER

STANDARD FLAT-TRACK SPACER

STANDARD F.T. END-STOP

BOLT THRU STAND-OFF TO RECEIVER-NUT

TRACK BOLT CENTERLINE = DOOR HEIGHT + 2"

1/2 in TOP OF DOOR TO BOTTOM OF TRACK

1 1/2 in TRACK BOLT C.L. - TOP OF DOOR

TYPICAL, 1-1/2" TOP OF DOOR TO FLAT-TRACK LAG-BOLT CENTERLINE

ANTI-JUMP DISC OR SOFT-STOP TRIGGER

HEX BOLT, WASHER AND CAP-NUT

DOOR UP TO 1-3/4", ADDITIONAL SPACERS WILL BE NEEDED FOR THICKER DOORS (SEE SPACER CHART)


TYPICAL GAPS FROM WALL OR LEDGER EDGE W / 1-3/4" DOORS

1/2 in
 7/8 in

1 3/4 in DOOR THICKNES

1 7/16 in FACE OF DOOR TO FACE OF DOOR

1/2 in
 GAP, BOTTOM OF DOOR TO FINISHED FLOOR LEVEL.

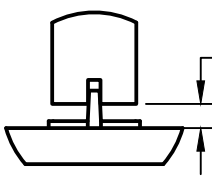

NOTES: AERO AND PROP TROLIES REQUIRE NO ADDITIONAL SPACERS TO CLEAR BYPASS BRACKET. ADDITIONAL SPACERS WILL BE REQUIRED ON OUT-SIDE TRACK FOR 2-1/4" AND THICKER DOORS TO ALLOW FOR DOOR CLEARANCES (BETWEEN DOORS).



Real Carriage Door & Sliding Hardware Company, Inc.
 9770 44th Ave. NW
 Gig Harbor, WA 98332
 Tel: (800) 694-5977
 Fax: (253) 649-4241

This print is the property of Real Carriage Door Company Inc. and is loaned to the recipient subject to be returned upon demand. All contents herein are confidential and must not be copied or submitted to outside parties for examination without the express written consent of Real Carriage Door Company Inc.