

These instructions cover the preparation of the **CS Frameless Glass Clamp System**. Fit glass to the clamp system by following the instructions below then refer to the installation instructions for the track you have purchased.


1 Fitting the glass.

Ensure glass clamp gaskets (supplied by CS) are in place on both sides of the clamp assembly as shown.

Loosen off the M8 x 30mm (1-3/16") countersunk machine bolts enough to slide glass into position so that the top edge of the glass is hard into the clamp. You may need to loosen the machine screws holding the mounting plate in place to do this.

Check notch position before hanging glass: The wide notches on the clamp spacers must be orientated as shown to suit 10mm (3/8") glass. Once in place, tighten the bolts off using a torque wrench to 27Nm.


Re-tighten mounting plate screws. Fit end cap(s) and bolt head cover extrusion if required. These may be required for aesthetic purposes when Full-Height detail option is chosen.

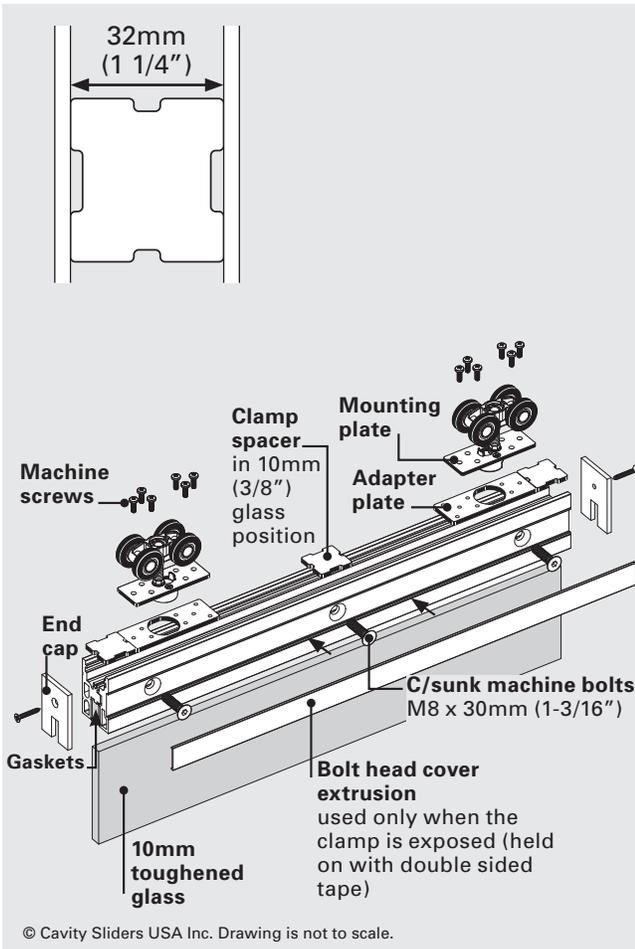

© Cavity Sliders USA Inc. Drawing is not to scale.

Install and adjust your door as per the track installation instructions.

2 Suggested assembly detail

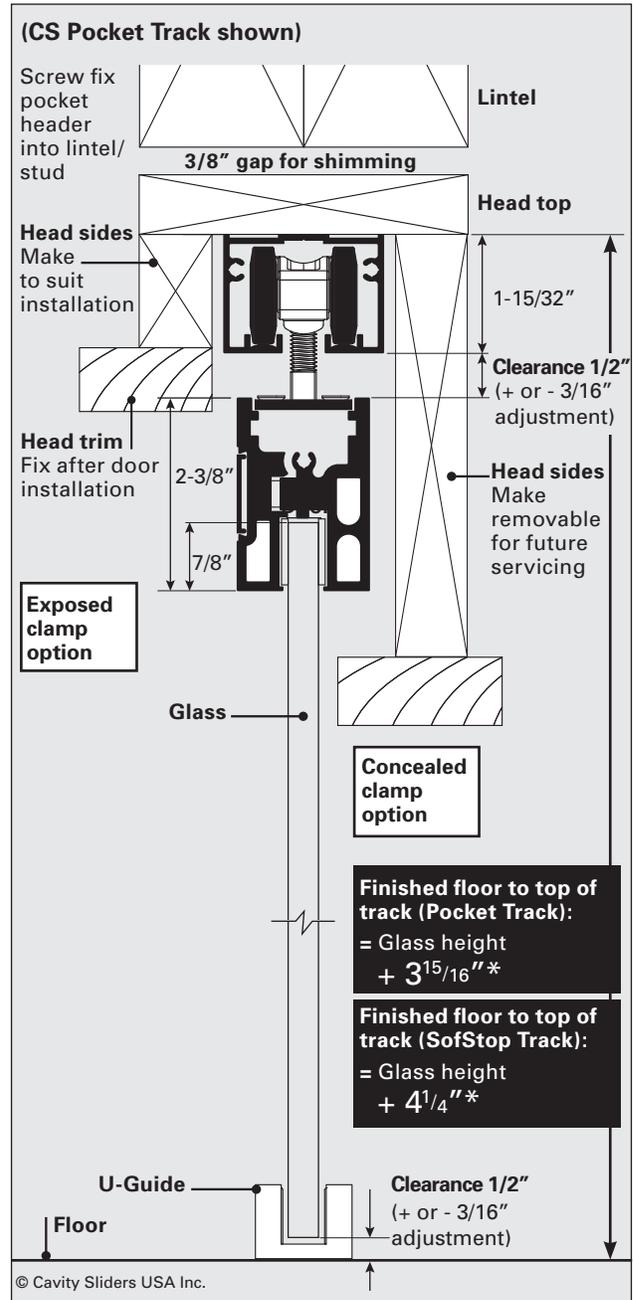

© Cavity Sliders USA Inc. *Assuming 1/2" middle carriage height adjustment and 1/2" floor clearance

© All copyright and other property in this document is reserved by Cavity Sliders USA Inc. Details and specifications are subject to change without notice. Whilst all care is taken to ensure the accuracy of all information, no responsibility will be accepted for any errors or omissions. Patent Pending. 03.2017 - 61177

Another quality product from: